



Canada Border
Services Agency

Agence des services
frontaliers du Canada



Tailoring Guideline

New Shoulder Insignia and Reflective Tape

PROTECTION
SERVICE
INTEGRITY



PROTECTION
SERVICE
INTÉGRITÉ

July 2014

PROTECTION • SERVICE • INTEGRITY

Canada



Reflective Tape




Large size




Small size



Duty Shirt & Sweater

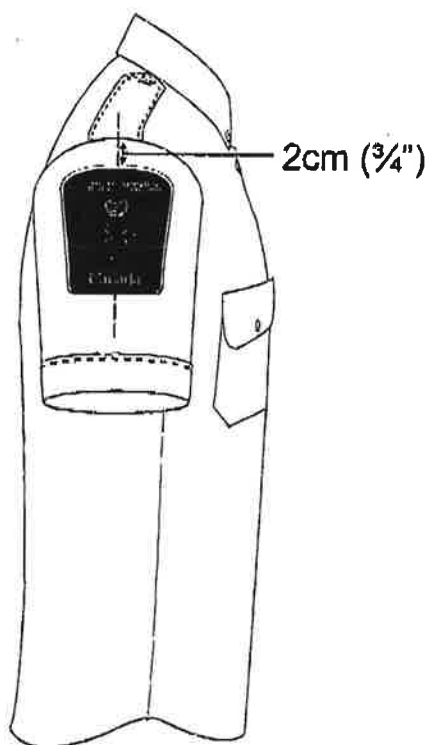

Duty Shirt

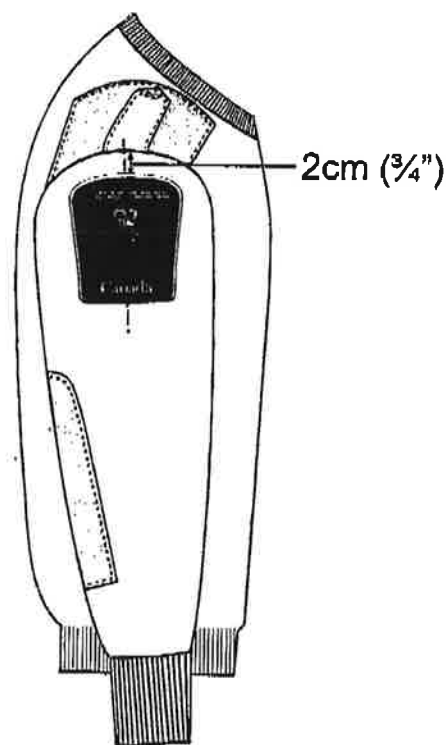


Sweater

Shoulder Insignia

1. Remove current insignia (if applicable).
2. Sew on shoulder insignia positioned to cover existing holes.
3. Ideal placement is centred on the sleeve 2cm ($\frac{3}{4}$ ") below the top of the shoulder seam.



Bomber Jacket

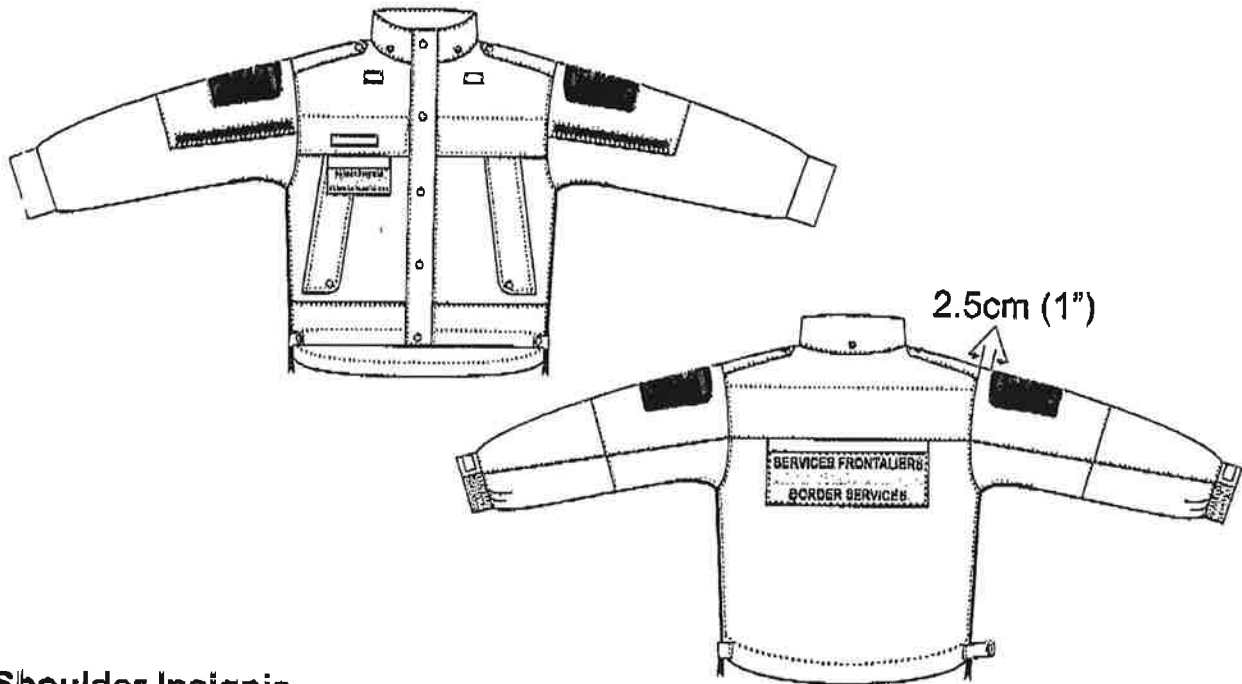

Shoulder Insignia

1. Remove current insignia (if applicable).
2. Sew shoulder insignia to the outer sleeve pocket, accessible through the zipper.
3. Ideal placement centred on the sleeve 2.5cm (1") below the top of the shoulder seam.


Reflective Tape (1 large and 1 small)

1. Remove silver "CBSA-ASFC" reflective tape from the rear drop-down flap.
2. Sew **small** size yellow "Border Services/Services Frontaliers" reflective tape onto the front drop-down flap only, not through the body of the garment.
3. Sew **large** size yellow "Border Services/Services Frontaliers" reflective tape onto the rear drop-down flap only, not through the body of the garment.


CAUTION: This is a water resistant garment, the use of pins or other products that penetrate the outer shell shall be restricted to under the alteration area.



Protective Vest - External Carrier

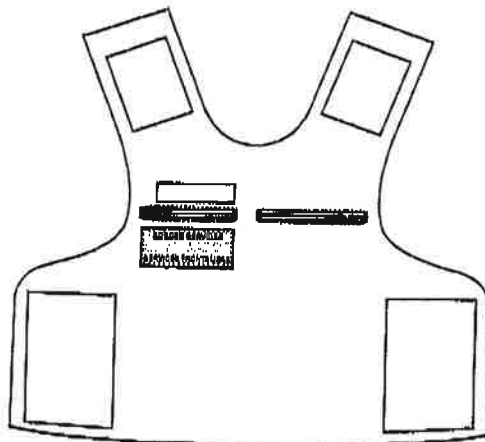

Front

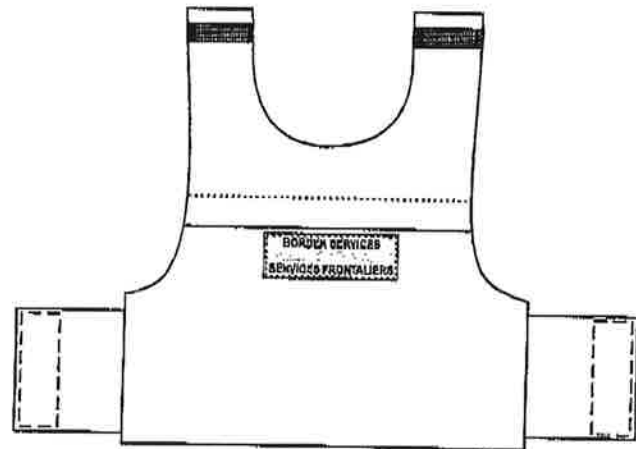

Back

Reflective Tape - External Carrier Front (1 small)

1. Completely remove the silver "CBSA-ASFC" reflective tape.
2. Sew **small** size yellow "Border Services/Services Frontaliers" reflective tape directly onto drop-down flap. If it does not fit, sew the reflective tape directly onto the carrier front centered 1.27cm ($\frac{1}{2}$ ") below right chest pocket.

Note: The reflective tape cannot be placed in any other location on the front of the carrier.

Reflective Tape - External Carrier Back (1 large)

1. Completely remove rear drop-down flap containing silver "CBSA-ASFC" reflective tape.
2. Sew on **large** size yellow "Border Services/Services Frontaliers" reflective tape directly to the back of the carrier, centred 1.27cm ($\frac{1}{2}$ ") below the back yoke.

CAUTION: Ensure that ballistic panels are removed prior to performing any alterations on the external carriers.