




Bomber Jacket

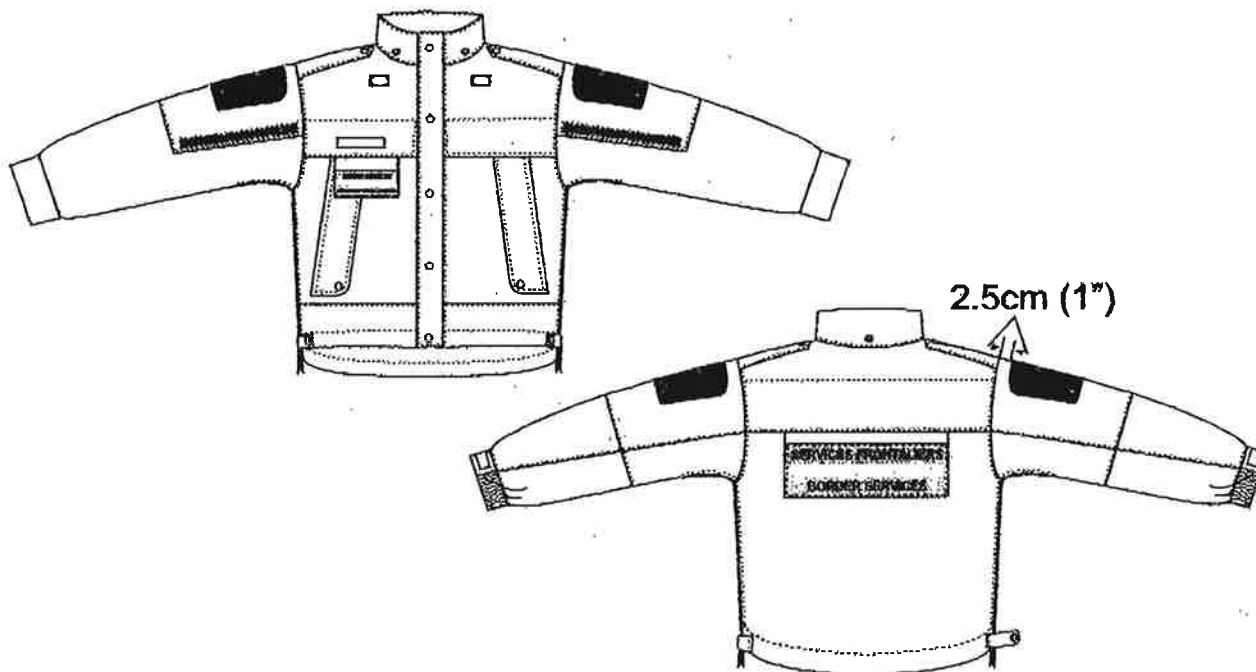

Shoulder Insignia

1. Remove current insignia (if applicable).
2. Sew shoulder insignia to the outer sleeve pocket, accessible through the zipper.
3. Ideal placement centred on the sleeve 2.5cm (1") below the top of the shoulder seam.

Reflective Tape (1 large and 1 small)

1. Remove silver "CBSA-ASFC" reflective tape from the rear drop-down flap.
2. Sew **small** size yellow "Border Services/Services Frontaliers" reflective tape onto the front drop-down flap only, not through the body of the garment.
3. Sew **large** size yellow "Border Services/Services Frontaliers" reflective tape onto the rear drop-down flap only, not through the body of the garment.

CAUTION: This is a water resistant garment, the use of pins or other products that penetrate the outer shell shall be restricted to under the alteration area.